
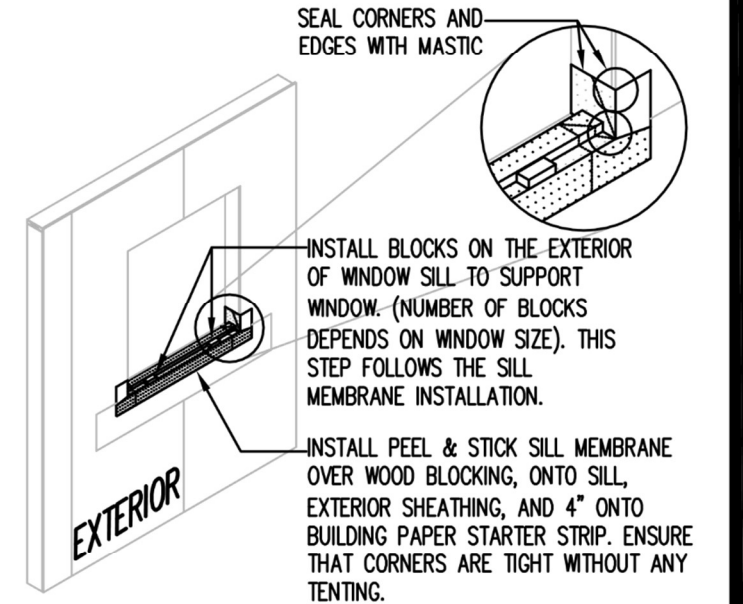


**1** PRESTRIP PAPER AND SILL DAM  
B-001 SCALE: N.T.S.

**2a** OPTION 1: FLEXIBLE MEMBRANE  
B-001 SCALE: N.T.S.

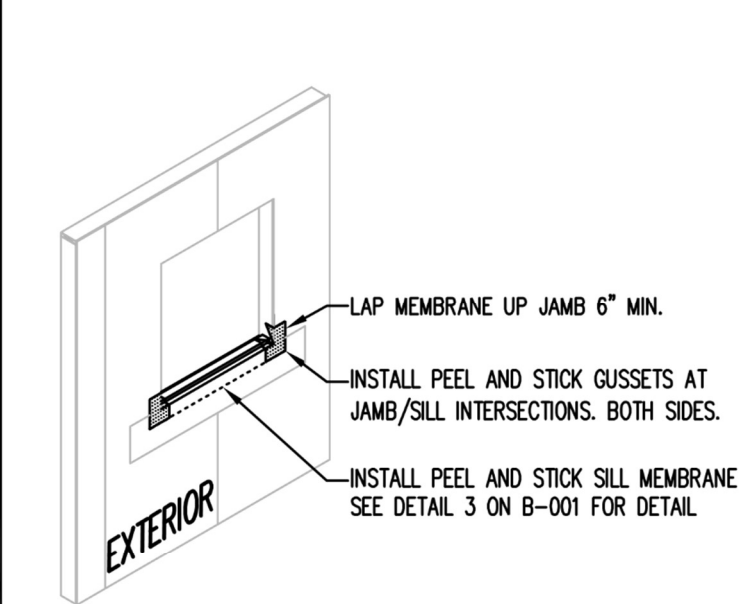

**2b** OPTION 2: FLAT STOCK MEMBRANE  
B-001 SCALE: N.T.S.

**3** INSTALLATION OF SILL MEMBRANE AND WOOD BLOCKING  
B-001 SCALE: N.T.S.

CALGARY OFFICE  
N195 - 3015 5 Avenue NE  
Calgary, AB T2A 6T8

Bus: (403) 263-2393  
Toll Free: 1-800-263-2393  
Fax: (403) 262-9075

info@williamsengineering.com  
www.williamsengineering.com

WILLIAMS ENGINEERING CANADA

THIS DRAWING IS NOT TO BE SCALED.

JOB. TITLE:  
**WINDOW INSTALLATION PROCEDURE DETAILS**

DWG. TITLE:  
**WINDOW INSTALLATION PROCEDURE DETAILS PAGE 1**

DWN. BY: CN	DES. BY: RS	PROJ. MGR.: --
PEER REVIEW: RS	DATE: (YY-MM-DD) 2011.02.14	SCALE: N.T.S.
CLIENT PROJ. # --	WE PROJ. # --	OF 3 REV # A
DWG # <b>SKETCH-A-B-001</b>		